


QBOX + SLIDER INSTALLATION INSTRUCTIONS

- 1** Apply Loctite® Threadlocker Blue 242® on the thread of the two included mounting bolts.
- 2** Align the slider track's pre-drilled bolt holes on the back of the seat tube. Using a 3mm allen wrench tighten bolts—to 3Nm—into slider and seat tube.
- 3** Insert the box, without the lid, into the molded slider track. Slide the box to the very bottom of the slider.
- 4** Insert the lid tab into the molded slider by angling the lid down into the lid tab hollow located just above the box.
- 5** After the lid tab is inserted, gently squeeze both black side-tabs together allowing for the tabs to be inserted into the box. When the lid is secured the black side-tabs will expand into place.

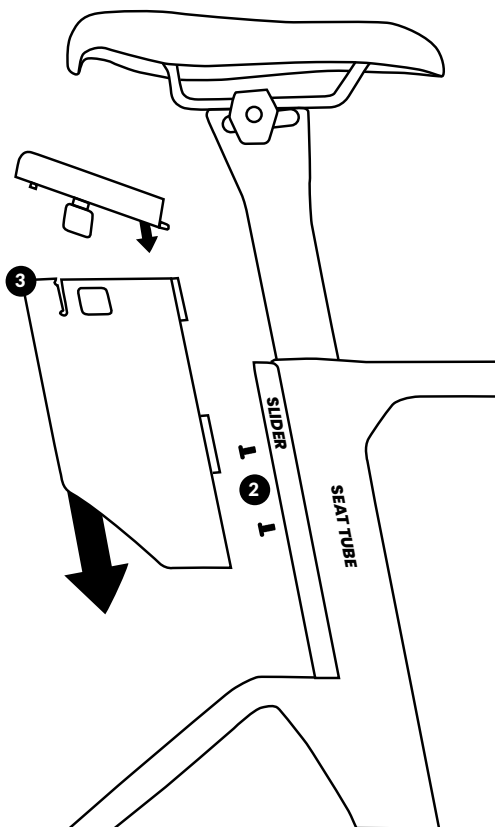

QR TIP:

This QBox system features a lid tension adjustment. This allows normal wear and tear noises to be easily removed. Follow the steps provided to prevent a "loose lid" noise.

A. Lightly tighten the slider retention bolts, allowing the slider to be moved on the frame with a light amount of pressure.

B. Install the box with the lid and move just the slider upward on the back of the seat tube. This will tighten the fit of the three components.

C. Without moving the slider, carefully remove the lid and box. Once removed tighten the slider retention bolts appropriately to 2-3Nm.

